

TECHLIFE X7

Maximum speed unlocking manual


1. Place your scooter on a stand so the wheels do not touch the ground.
2. Unscrew the front right cover that contains a light.



3. Be careful when pulling it away not to damage the cables.



4. Find 2 bundled white cables and cut both of them at any point.

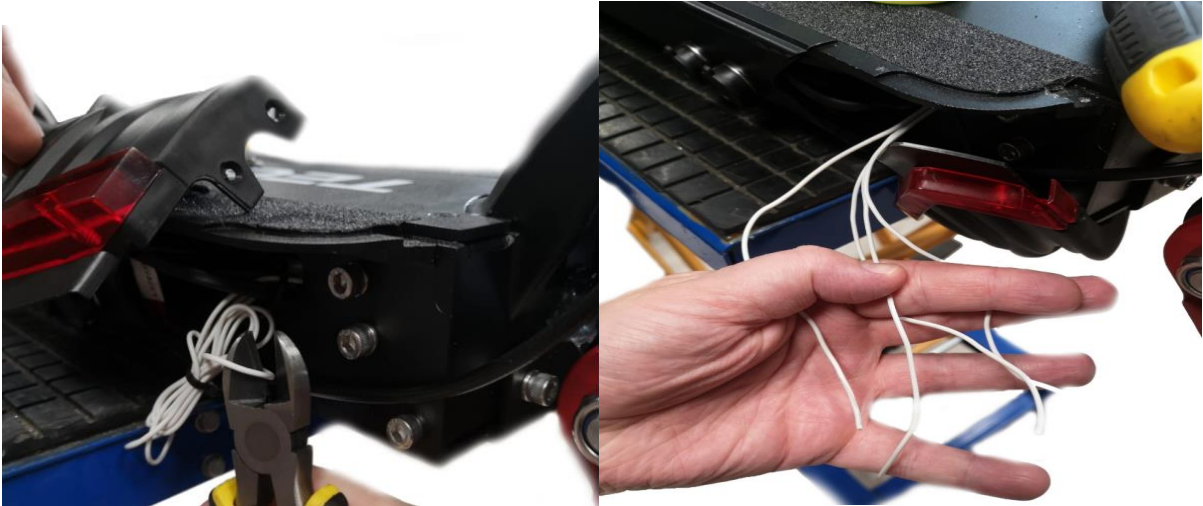

5. Put the cables back inside the deck and screw in the plastic cover.

WARNING:

Due to safety reasons maximum speed has been factory limited to 25km/h. The limit exists to ensure safety of both the rider and other people around them. The distributor is not responsible for any accidents, harm or damage caused by removing the maximum speed limit of the scooter. The responsibility of removing the maximum speed limit and increasing maximum speed is on the rider. Removing the maximum speed limit DOES NOT void the warranty.

DO NOT press the "ECO" button on the handlebar if you are riding with a speed higher than 30km/h as the button is programmed to sharply slow down the scooter to 25km/h when it is pressed. Pressing it while riding with a speed higher than that may result in loss of control over the scooter and dangerous accidents with severe damage to the body. The "ECO" button has been designed with a maximum speed not higher than 30km/h in mind.